



Masonry Barbecues Installation Guide

Due to the weight of the parts a minimum of two people is required for the assembly of the barbecue.

For safety reasons it is recommended children are kept out of the fitting area.

The barbecue needs a solid and levelled base to be prepared prior to installation.

Prepare the adhesive supplied with the barbecue in batches to make sure it doesn't dry up before the installation finishes. Put enough adhesive to connect the elements but avoid spilling it outside the seams as it will not look aesthetic and you may not have enough to complete the installation.

Follow the below steps:



1. Level the base



2. Install the first leg 50mm from the verge of the base



3. Install the 580x500mm back piece



4. Install the second leg allowing a 580mm gap



5. Install the arch



6. Install top shelf



7. Install BBQ side wall



8. Install BBQ granite back




9. Install BBQ granite bottom tiles

Covering your BBQ for winter will significantly increase the stone's lifespan.

As the BBQ is built of a natural stone and concrete small cracks may appear with time.

This is not a flaw of the product and it can be safely used.

Masonry Barbecues Installation Guide

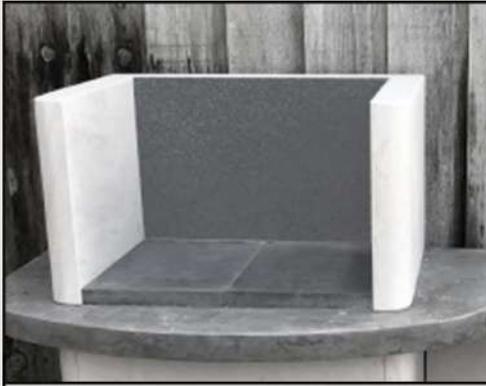

10. Install second BBQ side wall



11. Install the gather making sure you leave a 10mm overhang



12. Install the remaining chimney sections



13. Install chimney cap

14. Install the steel BBQ insert



VAMO

overall height: 2020mm
overall width: 1000mm
overall depth: 570mm
height to top of shelf: 600mm
weight: 450kg

VAMO with SIDE TABLE

overall height: 2020mm
overall width: 1620mm
overall depth: 570mm
height to top of shelf: 600mm
weight: 580kg

DESOTO

overall height: 2050mm
overall width: 1000mm
overall depth: 570mm
height to top of shelf: 600mm
weight: 450kg

DESOTO with SIDE TABLE

overall height: 2050mm
overall width: 1620mm
overall depth: 570mm
height to top of shelf: 600mm
weight: 580kg